


W a s h i n g m a c h i n e

User information

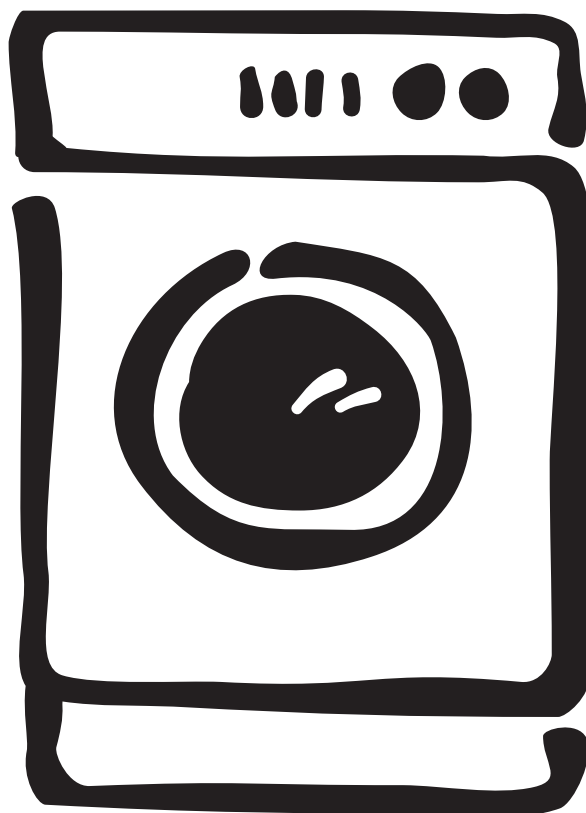

Swissline GL EWF 1082

Dear customer,

Please read this User Information carefully and keep it to refer to at a later date.

Pass this User Information on to any subsequent owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning: Notes that concern your personal safety.

Attention: Notes that show how to avoid damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	4
Safety	4
Description of the appliance	5
Control panel	5
Programme overview	6
Overview of terms	8
Before the first wash	9
Preparing and sorting washing	9
Running a washing cycle	10
Opening the door/loading washing	10
Adding detergent/additives	11
Switching on the appliance/ selecting a programme	12
Changing the spin speed/selecting rinse hold	12
Selecting the programme options	13
EXTRA RINSE	13
QUICK WASH	13
PRE WASH	13
STAIN	13
SENSITIVE	13
Setting the delay timer	14
Starting a programme	14
Programme progress	14
Interrupting a programme/adding washing	14
End of the wash cycle/removing the washing	14
Overdosing	14
Child safety device	15
Cleaning and maintenance	16
What to do if...	17
Remedying small malfunctions	17
If the wash results are not satisfactory	18
Carrying out an emergency drain	19
Drain pump	20
Disposal	21
Technical data	22
Consumption values	22
Installation and connection instructions	23
Safety information for the installation	23
Installing the appliance	23
Transporting the appliance	23
Removing the transit packaging	24
Where to install	25
Making the appliance level	26
Electrical connection	26
Connecting to the water supply	26
Water inflow	27
Water drainage	28
Service	31

Operating Instructions

Safety

Prior to using for the first time

- Follow the **"Instructions for installation and connection"**.
- If the appliance is delivered in the winter months when there are minus temperatures: Store the washing machine at room temperature for 24 hours before using for the first time.

Correct use

- The washing machine is only designed for the washing of normal domestic laundry at home.
- Additions or modifications to the washing machine are not permitted.
- Use only detergents and additives that are suitable for use in domestic washing machines.
- The washing must not contain any inflammable solutions. Danger of explosion!
- Do not use the washing machine for dry cleaning.
- Dyes/colour removers may only be used in the washing machine, if the manufacturer of these products expressly permits this. We cannot be held responsible for any damage arising.


Child safety

- Keep packaging away from children. There is a risk of suffocation.
- Children often do not recognise the hazards associated with electrical appliances. Don't allow children to use the washing machine unsupervised.
- Make sure that children and pets don't climb into the drum of the washing machine. Could endanger life!


General safety

- Repairs to the washing machine must only be carried out by qualified service engineers.
- Never use the washing machine if the mains cable is damaged; or if the control panel, work top or plinth area is damaged such that the inside of the appliance is freely accessible.
- Switch off the washing machine before cleaning, maintenance and servicing. In addition, pull the mains plug out of the socket or – in the case of a permanent connection – switch off the cut-out in the fuse box or remove the screw fuse completely.
- If operation is stopped, disconnect the appliance from the mains supply and shut off the water tap.
- Never unplug the appliance by pulling on the cable. Always pull the plug.
- Multi-way plugs, connectors and extension cables must not be used. **This could constitute a fire hazard through overheating.**
- Never wash the washing machine down with a water jet. Danger of electric shock!
- In washing programmes with high temperatures the glass in the door gets hot. Do not touch it.
- Before emergency emptying of the appliance, before cleaning the drain pump or opening the door in an emergency, let the water cool down.
- Small animals can nibble at the cables and water hoses. Danger of electric shock and danger of water damage! Keep small animals away from the washing machine.


Description of the appliance

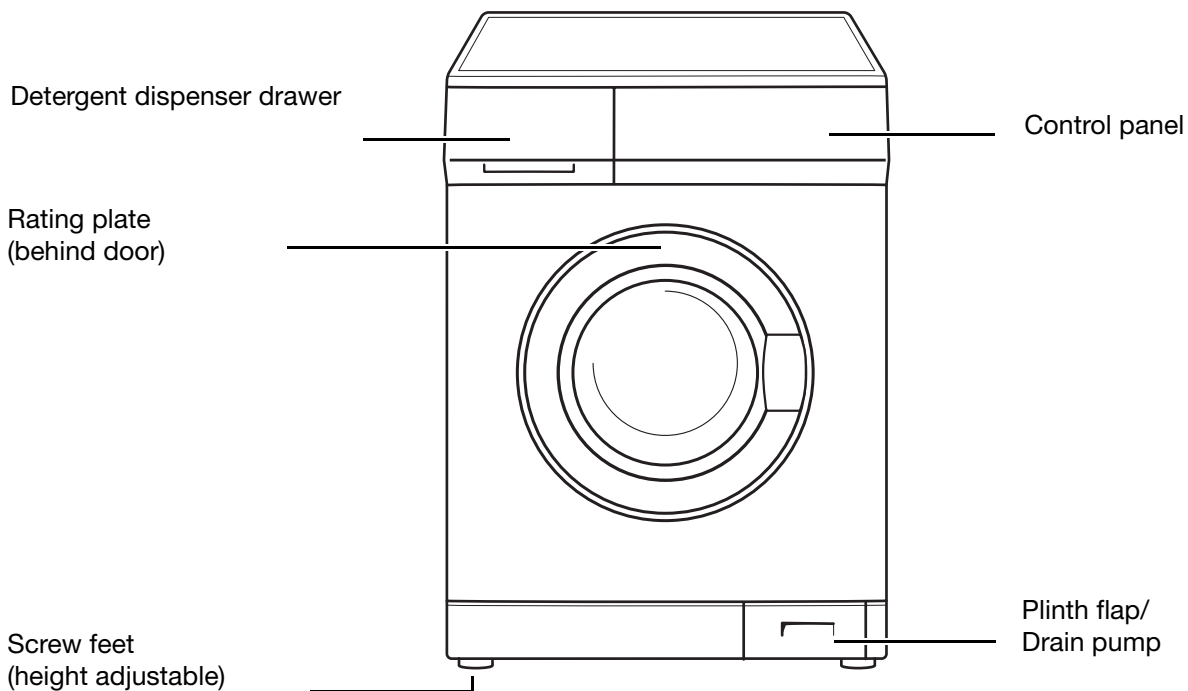

Control panel

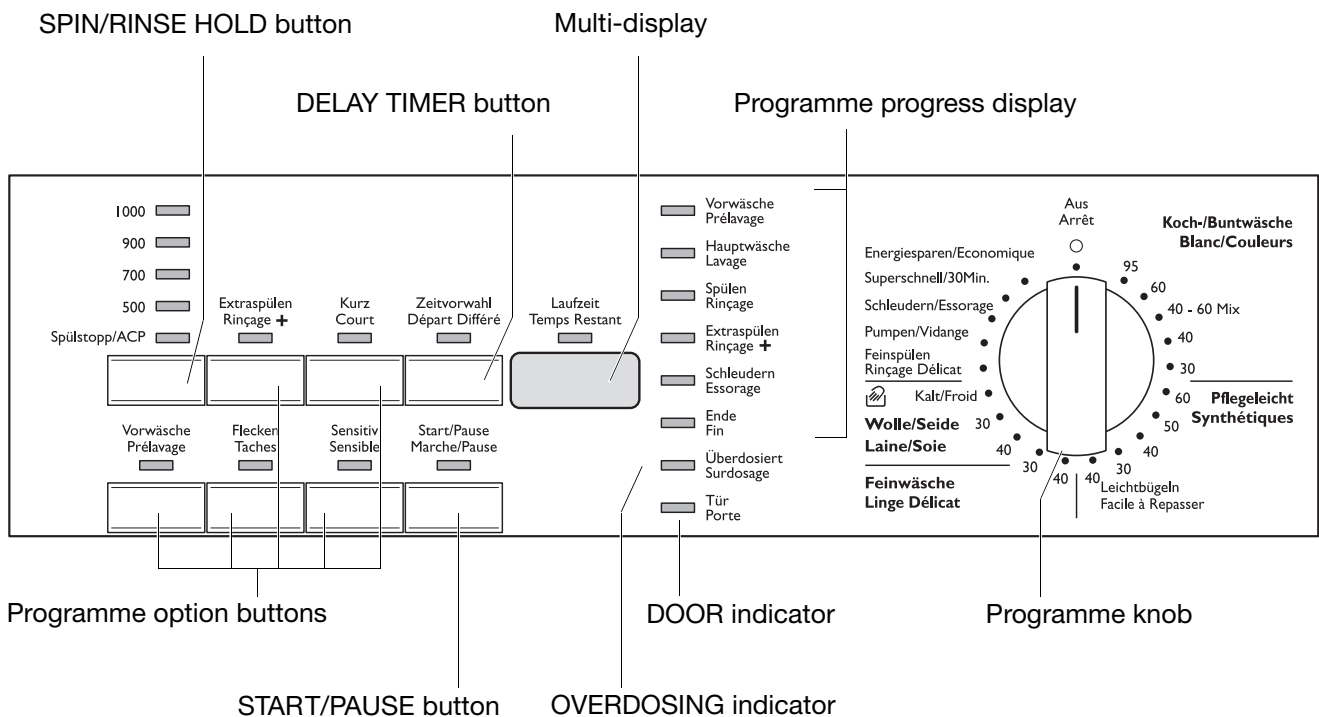





























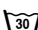



Programme overview

Programme	max. load ¹⁾ (dry washing)	Programme options					Spin speed				RINSE HOLD
		RINSE +	QUICK WASH	PRE WASH	STAIN	SENSITIVE	1000	900	700	500	
ENERGY SAVING ²⁾	6kg	•		•	•	•	•	•	•	•	•
COTTONS/LINEN 95, 60, 40, 30	6kg	•	•	•	• ³⁾	•	•	•	•	•	•
40-60 MIX	6kg	•		•	•	•	•	•	•	•	•
EASY-CARES 60, 50, 40, 30	3kg	•	•	•	• ³⁾	•	•	•	•	•	•
EASY IRON 40	1kg	•	•	•	•		•	•	•	•	•
DELICATES 40, 30	3kg	•	•	•			•	•	•	•	•
WOOL/SILK  (Handwash) 40, 30, COLD	2kg						•	•	•	•	•
GENTLE RINSE	3kg						•	•	•	•	•
DRAIN											
SPIN	6kg						•	•	•	•	
REFRESH	3kg						•	•	•	•	•

1) A 10 litre bucket holds around 2.5 kg of dry washing (cotton).

2) Programme settings for testing in accordance with or in support of standard EN 60 456 and IEC 60 456, are described in the Chapter “Consumption values”.

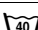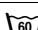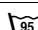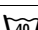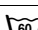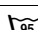3) STAIN can only be selected with wash temperatures of 40°C and above, as stain treatment products are only effective at higher temperatures.

Use/Features	Caresymbols ¹⁾
Energy-saving programme at 60 °C for lightly to normally soiled whites/coloureds made of cotton/linen.	 
Programme for normally to heavily soiled whites and coloureds made of cotton/linen.	  
Programme for whites and coloureds which are labelled for different wash temperatures. Items, which according to the care symbols are normally to be washed separately at 40 °C or at 60 °C, can be washed together in this programme. This makes better use of the drum capacity and thus saves energy. Through an increased wash time the washing results of a normal 60° programme are achieved.	 
Programme for easy-care mixed fibres and synthetics.	  
Special programme at 40 °C for easy-care fabrics which, after this programme, need no or very little ironing.	 
Gentle programme for delicate fabrics such as bonded fabrics, microfibres, synthetics, net curtains (max. load for net curtains 20 to 25 m ²). With RINSE HOLD also suitable for fabrics with climate membrane, e. g., outdoor clothing.	 
Particularly delicate programme for machine washable and hand washable wool/silk.	  
Separate gentle rinse (3 rinses, liquid conditioner is washed in from compartment 8, gentle spin).	     
Pumps water away after a RINSE HOLD.	
Pumps water out and spins, e. g. after a RINSE HOLD, or separate spin for hand-washed cottons/linens.	  
Special programme at 30 °C, approx. 30 minutes, for quickly washing through e. g. once worn, slightly dirty sports clothing or new clothes.	     

1) The numbers in the care symbols show the maximum temperatures.

Overview of terms

The English terms used in this User Information booklet correspond to the German/French names below that are to be found on your appliance's control panel.

Programme selector		Buttons	
OFF	AUS ARRET	PRE WASH	VORWÄSCHE PRELAVAGE
COTTONS/ LINEN	KOCH-/BUNTWÄSCHE BLANC/COULEURS	STAIN	FLECKEN TACHES
EASY-CARE	PFLEGELEICHT SYNTHETIQUES	SENSITIVE	SENSITIV SENSIBLE
EASY IRON	LEICHTBÜGELN FACILE A REPASSER	START/PAUSE	START/PAUSE MARCHÉ/PAUSE
DELICATES	FEINWÄSCHE LINGE DELICAT	DELAY TIMER	ZEITVORWAHL DEPART DIFFERE
WOOL/SILK	WOLLE/SEIDE LAINE/SOIE	Display	
COLD	KALT FROID	WASH TIME	LAUFZEIT TEMPS RESTANT
GENTLE RINSE	FEINSPÜLEN RINCAGE DELICAT	PRE WASH	VORWÄSCHE PRELAVAGE
DRAIN	PUMPEN VIDANGE	MAIN WASH	HAUPTWÄSCHE LAVAGE
SPIN	SCHLEUDERN ESSORAGE	RINSE	SPÜLEN RINCAGE
REFRESH	SUPERSCHNELL 30 MIN.	RINSE +	EXTRASPÜLEN RINCAGE +
ENERGY SAVING	ENERGIESPAREN ECONOMIQUE	SPIN	SCHLEUDERN ESSORAGE
Buttons		END	ENDE FIN
RINSE HOLD	SPÜLSTOPP ARRET CUVE PLEINE	OVER DOSING	ÜBERDOSIERT SURDOSAGE
RINSE +	EXTRASPÜLEN RINCAGE +	DOOR	TÜR PORTE
QUICK WASH	KURZ COURT		

Before the first wash

1. Open the detergent dispenser drawer.
2. Pour about 1 litre of water through the detergent dispenser drawer into the washing machine.

This closes the water container when the next programme is started and the economy valve can function properly.

3. In order to remove any residues from the drum and water container which may have been left during manufacturing, perform the first wash cycle without any washing in the machine. Programme: COTTONS/LINEN 60, press QUICK WASH, add 1/4 of a measuring cup of washing powder.

Preparing and sorting washing


Preparing washing

- Empty pockets. Remove foreign bodies (e. g. coins, paper clips, nails, etc.).
- Do up zips, button up covers to prevent damage to washing.
- Remove the runners from net curtains or cover them with a net or a bag.
- Wash sensitive and small items in a net or a pillow case, e.g. net curtains, tights, socks, handkerchiefs, bras.

Important! Bras and other items containing wires should only be washed in a net bag. The wires can work loose and damage the appliance.

Sorting washing

- By colour: Wash white and coloured washing separately. Washing can run.
- By temperature, type of washing and care symbol.

Important! Do not wash fabrics with care symbol  (= do not wash!) in the washing machine.

Running a washing cycle

Opening the door/loading washing

1. To open the door: pull the door by the handle.


When the machine is switched on, the DOOR light and the START/PAUSE light indicate whether the door can be opened:

DOOR indicator	START/PAUSE indicator	Can the door be opened?
lit green	flashes red or is off	yes
lit green	lit red	yes, after the START/PAUSE button has been pressed
lit red or is off	flashes red or lit red	no, water level and/or temperature too high

2. Unfold washing and load it loosely into the machine. Mix large and small items.

Important! Do not get any washing caught between the door and the rubber seal.

3. Push the door shut firmly. Door catch must audibly click shut.

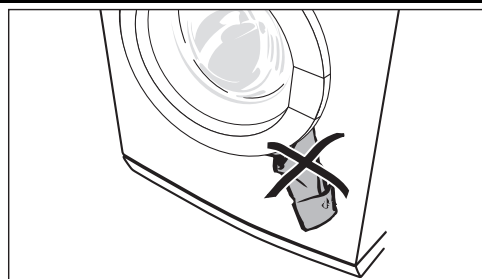

Adding detergent/ additives


Important: Use only detergents and additives that are suitable for use in domestic washing machines.

Dose detergent and additives according to the instructions of the detergent and additive manufacturers. Follow the instructions on the packaging.

Dosing depends upon:

- the washing's degree of soiling,
- the size of the load
- the degree of hardness of the water supply.
- If the manufacturer does not give instructions for small loads: for a half load, use a third less, for a very small load, use only half of the detergent that is recommended for a full load.
- From water hardness 2 (= medium) upwards, water softener should be used. Detergent can then always be dosed for water hardness 1 (= soft). Your local water company will be able to give you information about the water hardness in your area.

1. Pull the detergent dispenser drawer out as far as the stop.
2. Add the detergent/additives.
3. Push the drawer in fully.

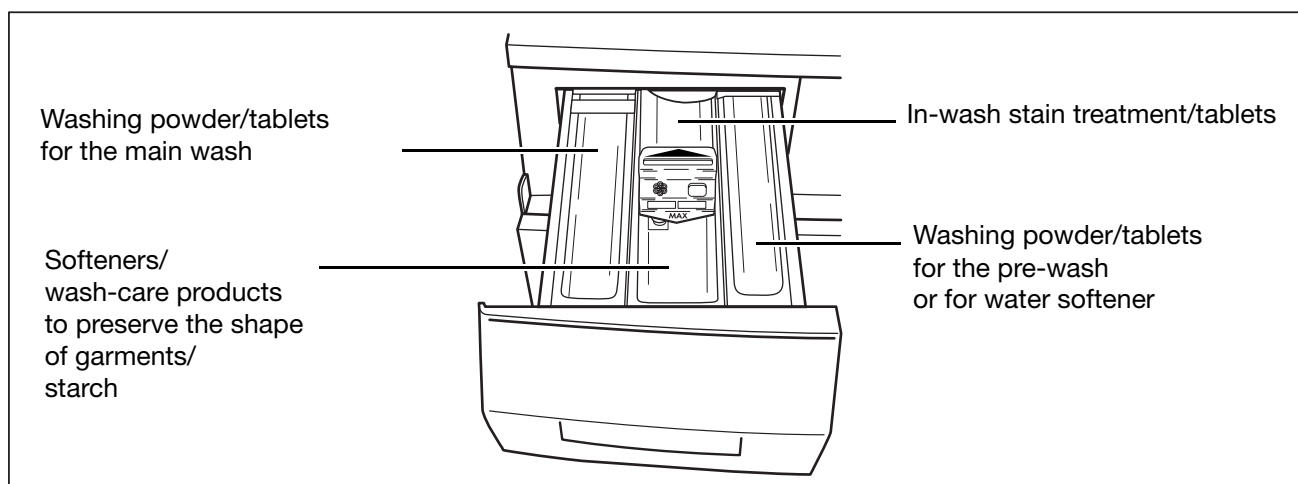

Washing powder/tablets for the main wash

If you are using water softener and need the right-hand compartment for the pre-wash detergent, add the water softener to the main wash detergent in the left-hand compartment.

Softeners, wash-care products to preserve the shape of garments, starch

Do not fill the compartment beyond the MAX mark. Dilute thick liquid concentrates according to the manufacturer's instructions before putting them into the drawer. Dissolve powder starches.


If you use liquid detergents:

Add liquid detergent using the dosage container provided by the detergent manufacturer.

Switching on the appliance/ selecting a programme

Set the programme and temperature using the programme knob.

- i** By selecting a programme, you switch the appliance on at the same time.
- The programme progress display indicates the programme steps that the selected programme will perform.
 - In the multi-display the estimated length of the programme (in minutes) appears.

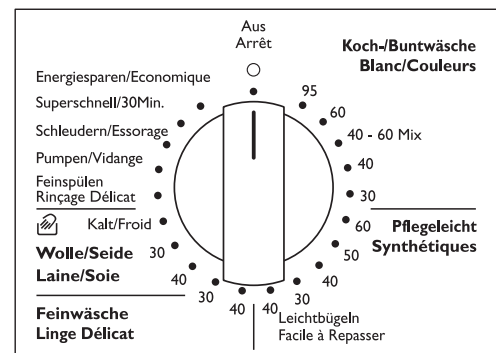

Changing the spin speed/ selecting rinse hold


The washing machine suggests the maximum permitted speed that is suitable for the selected programme. You can reduce this speed:


Press the SPIN/RINSE HOLD button repeatedly until the desired display lights up.

- i** The speed for the final spin can still be altered during the programme. To do this:

1. Press the START/PAUSE button.
2. Change the speed.
3. Press the START/PAUSE button again.

RINSE HOLD

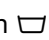
With  (RINSE HOLD) the washing is left to soak in the final rinse water. There is no final spin after the intermediate spin(s). Intermediate spins are programme-dependent and cannot be altered.

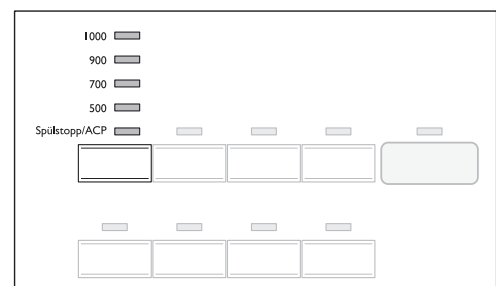

Selecting the programme options

If desired, press the programme option button(s).
The corresponding light lights up.

i If “Err” flashes in the multi-display, the programme option selected cannot be combined with the wash programme set.

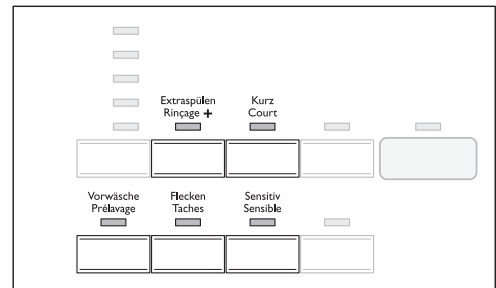

EXTRA RINSE

Two additional rinse cycles are carried out for the programmes ENERGY SAVING, COTTONS/LINEN, DELICATES, EASY-CARES and EASY IRON (e. g. in cases of over-sensitive skin).

QUICK WASH

Shortened wash cycle for lightly soiled washing.

PRE WASH

Warm pre-wash before the main wash, which follows automatically; intermediate spin in the COTTONS/LINEN and EASY-CARES programmes; no intermediate spin in the DELICATES programme.

STAIN

For heavily soiled or stained washing. In-wash stain treatment products are washed in at the optimum time as the programme progresses.

Can only be set with wash temperatures of 40°C and above, as stain treatment products are only effective at higher temperatures.

SENSITIVE

Enhanced rinse action through an additional rinse cycle together with decreased drum movement (improved fabric care). Ideal when frequent washes are necessary, e. g. in cases of over-sensitive skin.

Setting the delay timer

i With the TIME DELAY button you can postpone the start of a programme by 30 minutes (30') to a maximum of 23 hours (23h).

1. Select programme.
2. Continue pressing the TIME DELAY button until the desired start delay is displayed in the multi-display, for example 12h, if the start of the programme is to be delayed by 12 hours. TIME DELAY light is lit.

i If the display is showing 23h and you press the button again, the time delay will be cancelled. 0' appears followed by the duration of the set wash programme.

3. To activate the time delay, press the START/PAUSE button. The remaining time till the programme start is being shown (e. g. 12h, 11h, 10h, ... 30' etc.).

Starting a programme

1. Check that the tap is turned on.
2. Press the START/PAUSE button. The programme is started or starts after the time delay set has elapsed.

i If after the START/PAUSE button has been pressed E40 flashes in the multi-display, the END indicator flashes 4 times and at the same time an acoustic signal sounds 4 times, the door is not closed properly. Push the door firmly closed and press the START/PAUSE button again.

Programme progress

- The programme progress display shows the programme step that is currently being performed.
- The multi-display indicates the estimated time remaining (in minutes) until the end of the programme.

i During the washing cycle the remaining time may be increased or stay the same for a while as the programme adjusts itself to different conditions (e. g. type and quantity of laundry, out of balance spin detection, special rinses, etc.).

Interrupting a programme/ adding washing

Interrupting a programme

- A washing programme can be interrupted at any time by pressing the START/PAUSE button. It is then re-started by pressing the START/PAUSE button again.
- To stop the washing machine before the programme has ended, turn the programme knob to OFF. **Important!** Be careful if there is water in the appliance!

Adding washing

It is possible to add washing, as long as the DOOR light is lit green.

1. Press the START/PAUSE button. The door can be opened.
2. Shut the door and press the START/PAUSE button again. The programme continues.

End of the wash cycle/ removing the washing

At the end of the programme, END lights up on the programme progress display. The door can be opened as soon as the DOOR indicator is lit green.

1. Open the loading door and remove the washing.
2. Turn the programme knob to OFF.
3. After washing, pull out the detergent drawer a little to enable it to dry out. Keep the loading door very slightly open so that the washing machine can air.

If (RINSE HOLD) has been selected:

After the rinse hold, END lights up on the programme progress display.

The water must first be drained:

- Either turn the programme knob to OFF, then to DRAIN and press the START/PAUSE button (the water is drained without spinning),
- or turn the programme knob to OFF and then to SPIN. Change the spin speed if necessary and press the START/PAUSE button (the water is drained and the washing spun).

Overdosing


i If the OVERDOSING indicator is lit, too much detergent was used in the previous programme. The next time you wash, observe the dosing recommendations of the detergent manufacturer and the load sizes.

Child safety device

When the child safety device is set, the door can no longer be closed.

Setting the child safety device:


Use a coin to turn the knob (on the inside of the door) in a clockwise direction as far as it will go.

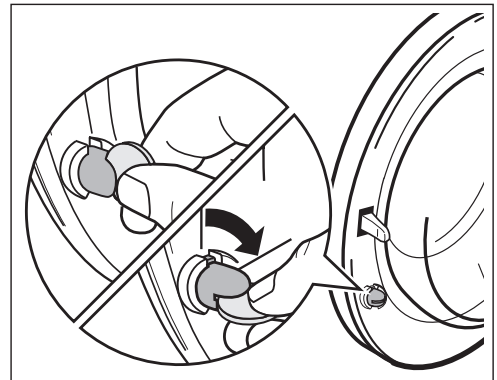

Warning! The knob must not be sunk-in after being set, otherwise the child safety device is not active. The knob must stand proud as shown in the illustration.

Releasing the child safety device:

Turn the knob anti-clockwise as far as it will go.

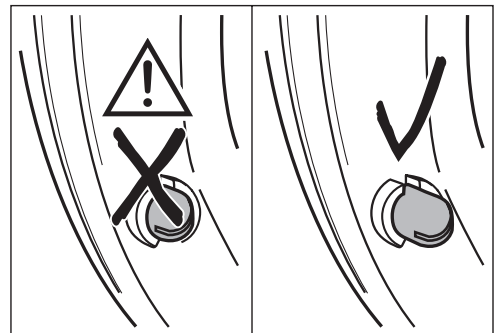


Cleaning and maintenance

Important! Do not use furniture care products or aggressive cleaners to clean the appliance.
Wipe control panel and body with a damp cloth.


Detergent dispenser drawer

The detergent dispenser drawer should be cleaned regularly.

1. Remove the detergent dispenser drawer by pulling it firmly.
2. Remove the conditioner insert from the middle compartment.
3. Clean all parts with water.
4. Put the conditioner insert in as far as it will go, so that it is firmly in place.

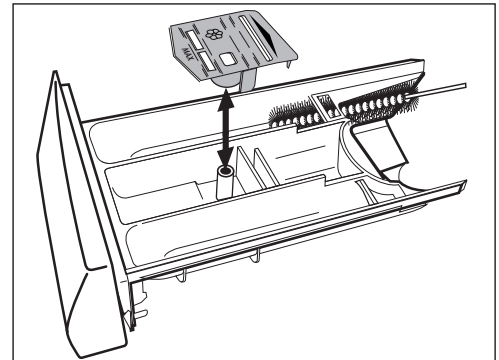

5. Clean all parts of the washing machine, especially the nozzles in the top of the washing-in chamber, with a brush.
6. Insert the detergent dispenser drawer in the guide rails and push it in.

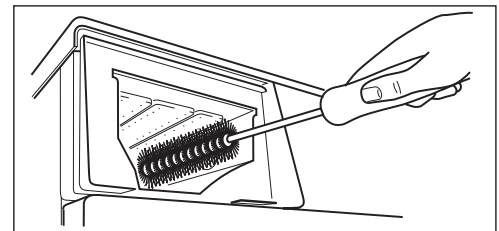

Washing drum

Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron.

Important! Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool.

1. Remove any rust deposits on the drum with a cleaning agent for stainless steel.
2. Run a washing cycle without any washing to clean off any cleaning agent residues. Programme: COTTONS/LINEN 60, press QUICK WASH button, add approx. 1/4 of a measuring cup of washing powder.

Door and rubber collar

Regularly check whether deposits or foreign bodies are present in the folds of the rubber collar or on the inside of the glass door.

Clean the glass in the door and the rubber collar regularly.

What to do if...

Remedying small malfunctions

If one of the following fault codes is displayed in the multi-display during operation:

- E 10 (Problems with water inlet),
- E20 (Problems with water drainage),
- E40 (door open),


please have a look at the following table.

When the fault is remedied, press the START/PAUSE button.

In the event of other faults (E plus a number or a letter): Switch the appliance off and on again. Re-set the programme. Press the START/PAUSE button.

If the fault is displayed again, please contact the Customer Care Department and inform them of the fault code.

Problem	Possible cause	Remedy
Washing machine does not work.	Mains plug not plugged in or fuse not working.	Plug in mains plug. Check fuse.
	Door not closed properly.	Close door - there should be an audible click.
	START/PAUSE button was not pressed for long enough.	Press START/PAUSE button for longer.
Door cannot be closed.	Child safety device engaged.	Release child safety device.
When a button is pressed, Err appears in the multi-display.	The selected function cannot be combined with the programme set.	Make another selection.
E40 appears. END indicator flashes 4x, at the same time an acoustic signal sounds 4x.	Door is not closed properly.	Close door properly. Start programme again.
E 10 appears. END indicator flashes 1x, at the same time an acoustic signal sounds 1x. (Problems with water inflow.)	Tap turned off.	Turn the tap on.
	Filter in the screw connection of the inlet hose is blocked.	Turn off the water tap. Unscrew hose, take out filter and clean it.
	Water tap is blocked with limescale or faulty.	Check the water tap and have it repaired if necessary.
Washing machine vibrates when operating or is noisy.	Transit packaging has not been removed.	Remove transit packaging.
	Screw feet not correctly adjusted.	Adjust feet according to the Installation and Connection instructions.
	There is very little washing in the drum (e.g., just one bathrobe).	This does not affect how the machine operates.
Water is leaking out underneath the washing machine.	Screw connection on the inlet hose is leaking.	Tighten inlet hose.
	Drain hose is leaking.	Replace drain hose.
	Drain pump cover is not closed properly.	Close cover properly.
	Washing was caught in the door.	Load washing carefully for the next wash.
	Emergency drain hose is leaking.	Close off emergency drain hose properly.

Problem	Possible cause	Remedy
EFF appears. END indicator flashes 15x, at the same time an acoustic signal sounds 15x. The drain pump runs constantly, even when the machine is switched off.	The Aqua Control anti-flood system has responded.	Turn off the tap, remove the mains plug from the socket and contact the Customer Care Department.
Washing water is foaming excessively. At the end of the washing cycle, the spin stops. OVER DOSING indicator is lit.	Probably too much detergent has been used.	Dose detergent exactly as instructed by manufacturer.
E20 appears. END indicator flashes 2x, at the same time an acoustic signal sounds 2x. (Problems with water outflow.)	Kink in the drain hose.	Remove kink.
	Maximum pumping height of 1 m exceeded.	Please contact the Customer Care Department.
	Drain pump is blocked.	Switch off appliance. Pull out mains plug. Clean drain pump. Remove foreign bodies from pump housing.
	With connection to sink outlet: sink outlet is blocked.	Clean out sink outlet.
Conditioner not rinsed in,  compartment for additives is filled with water.	Conditioner insert in the compartment for additives is not correctly attached or is blocked.	Clean detergent dispenser drawer, insert conditioner insert firmly.
Door cannot be opened when appliance is switched on.	Door locked.	Wait until DOOR indicator is lit green.
	Power cut. (All display indicators are off.) Door remains locked for 4 to 10 minutes.	Programme continues, when power cut is over. To remove washing: If water can be seen in the appliance, before opening the door, first drain off the water. (See section "Carrying out an emergency drain".)
Washing is heavily creased.	Possibly too much washing was loaded.	Observe maximum loads.

If the wash results are not satisfactory

Washing is grey and scale is being deposited in the drum

- Too little detergent is being used.
- The right detergent was not used.
- Special soiling was not pre-treated.
- Programme or temperature was not correctly set.

There are grey stains on the washing.

- Washing soiled with ointment, grease or oil was washed with too little detergent.
- It was washed at too low a temperature.
- A common cause is that fabric conditioner – especially a concentrate – has got onto the washing. Such stains should be washed out as quickly as possible and make sure that you are careful when using fabric conditioner.

After the last rinse foam can still be seen.

- Modern detergents may create foam even in the last rinse cycle. The washing is however sufficiently rinsed.

There are white residues on the washing.

- This is due to the insoluble ingredients in modern detergents.
They are not caused by insufficient rinsing.
Shake or brush the washing. If possible turn the washing inside out before washing. Check your choice of detergent. Especially with dark colours it is advisable to use liquid detergents.


Carrying out an emergency drain




Warning! Before emergency draining, switch off the washing machine and remove the mains plug from the socket.

Warning! The water that comes out of the emergency drain hose may be hot. There is a risk of scalding. Let the water cool before performing an emergency drain.

1. Open the plinth flap and remove it.

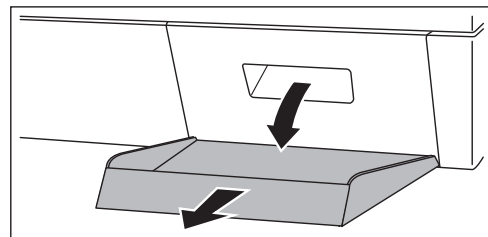


2. Take out the emergency drain hose.

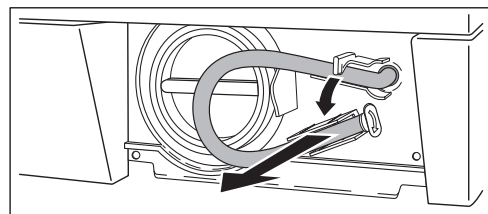

3. Place a shallow container underneath it. Then loosen the drain plug by turning it in an anti-clockwise direction and pull it out.

4. The water runs out. If it is necessary to empty the container more than once, seal up the emergency drain hose with the drain plug while you are doing so.

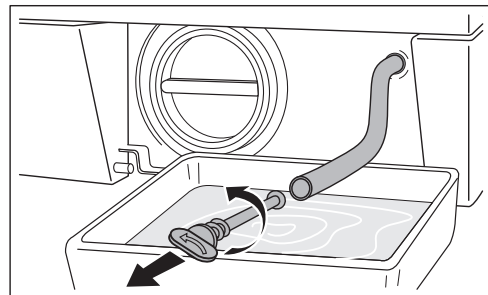

When the water has all drained away:

5. Push the drain plug firmly into the emergency drain hose and screw it tight in a clockwise direction.

6. Place the emergency drain hose back in the support.

7. Insert the plinth flap and close it.

Drain pump


The drain pump is maintenance-free. It is only necessary to open the pump cover if there is a malfunction and water is no longer being pumped out, e. g. if the pump wheel is blocked.

Please make sure before loading the washing that there are no foreign bodies in the pockets or caught between the washing. Paperclips, nails, etc. that may have got into the washing machine with the washing remain in the pump housing (foreign body trap that protects the pump wheel).




Warning! Before opening the pump cover, switch off the washing machine and remove the mains plug from the socket.


1. First carry out an emergency drain.
2. Place a cloth on the floor in front of the drain pump cover.
Residual water runs out.
3. Unscrew the pump cover in an anti-clockwise direction and remove it.

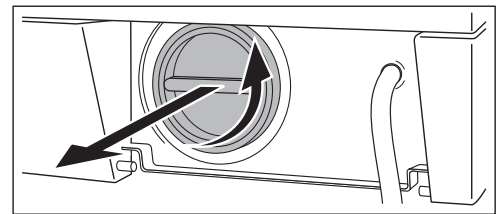


4. Remove foreign bodies and fluff from the pump housing and from the pump wheel.

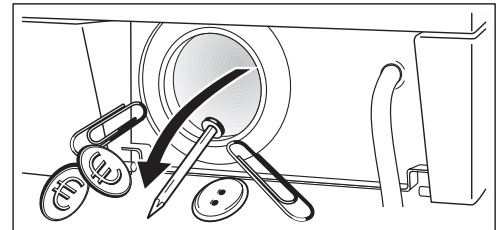

5. Check whether the pump wheel right at the back of the pump housing can turn. (It is normal for the pumping wheel to turn jerkily.) If the pumping wheel cannot be turned, please contact the Customer Care Department.

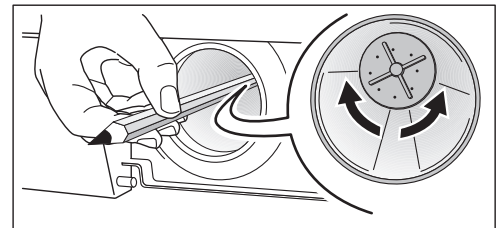

6. Insert the pump cover. Insert the guides at the sides of the cover into the guide slots and tighten the cover by turning in a clockwise direction.
7. Close off the emergency drain hose and place it in the support.
8. Close plinth flap.

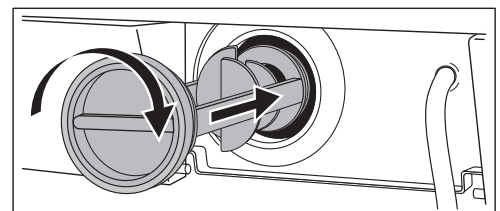

Disposal




Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Technical data


CE This appliance conforms with the following EU Directives:

- 73/23/EEC dated 19.02.1973 Low Voltage Directive
- 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
- 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x Width x Depth	850 x 598 x 640 mm
Depth when door is open	1017 mm
Height adjustment	approx. +10/-5mm
Load (depending on programme)	Max. 6kg
Area of use	Domestic
Drum spin speed	see Rating Plate
Water pressure	1-10 bar (=10–100N/cm ² =0.1–1.0MPa)

Consumption values

The consumption values were obtained under standardised conditions. They may vary when operating in domestic conditions.

Programme knob (Temperature)	Load in kg ¹⁾	Water in litres	Energy in kWh
COTTONS/LINEN 95	6	62	2,20
ENERGY SAVING ²⁾	6	45	1,02
COTTONS/LINEN 40	6	58	0,70
EASY-CARES 40	3	58	0,52
DELICATES 30	3	58	0,42
WOOL/SILK  (Handwash) 30	2	54	0,35

1) The load is determined in accordance with EN 60456 standard loads.

2) **Note:** Programme setting for testing in accordance with or in support of EN 60 456 and IEC 60 456.

Actual consumption will vary from the indicated values depending on water pressure, water hardness, water temperature at filling, room temperature, type and quantity of washing, detergent used, variations in mains voltage and any additional programme functions selected.

Installation and connection instructions

Safety information for the installation

- This washing machine **cannot be built-in**.
- Before using for the first time, check the appliance for damage sustained while it was being transported. Do not under any circumstances connect an appliance that is damaged. In the case of damage, please contact your supplier.
- Before using for the first time, all parts of the transit packaging must be removed. Otherwise when spinning damage may be caused to the appliance or to neighbouring units or furniture.
- Before using the appliance for the first time, splash protection must be completed. (See “Removing the transit packaging”.)
- Always plug the mains plug into a correctly installed shockproof socket.
- Permanent connection: a permanent connection must only be installed by a trained electrician.
- Prior to using the appliance for the first time, ensure that the rated voltage and type of supply on the rating plate match that of the supply where the appliance is to be installed. The fuse rating is also to be found on the rating plate.
- If work on the plumbing is required for the proper connection of the washing machine to the water supply, this must be undertaken by a registered plumber.
- If work on the electricity supply system is required for the proper connection of the washing machine to the electricity supply, this must be undertaken by a registered electrician.
- The washing machine's cable must only be replaced by the Customer Care Department or a registered electrician.

Installing the appliance

Transporting the appliance



Warning! The washing machine is very heavy. Risk of injury. Be careful when lifting.

- Do not lay the appliance on its front nor on its right side (as seen from the front). Electrical components may get wet.
- Never transport the appliance without its transit packaging. Only remove the transit packaging when the appliance is in its place of installation. Transporting the appliance without its transit packaging can lead to damage to the appliance.
- Never lift the appliance by the door when it is open nor by the plinth.


When moving using a sack trolley:

- Only use the sack trolley on the side of the appliance. The sack trolley's base plate must not be longer than 24 cm, otherwise parts of the anti-flood system may be damaged.


Removing the transit packaging

Important! Before using the appliance for the first time, all parts of the transit packaging must be removed! Keep the transit packaging in a safe place, in case it is needed at a later date when the appliance is to be moved (e.g. moving house).

1. At the back of the appliance, open both hose clips and remove both hoses and mains cable.

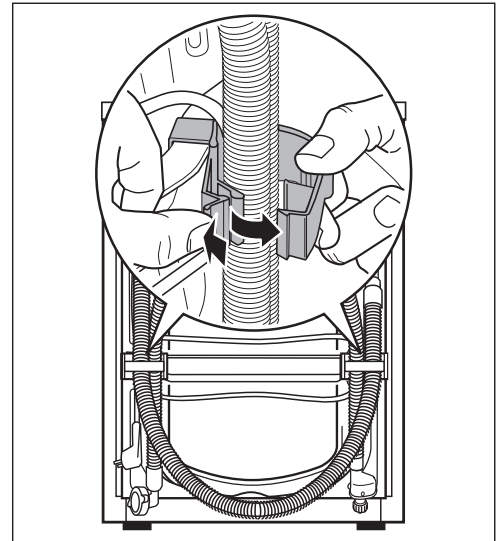


2. Remove both hose clips from the appliance by jerking them hard.

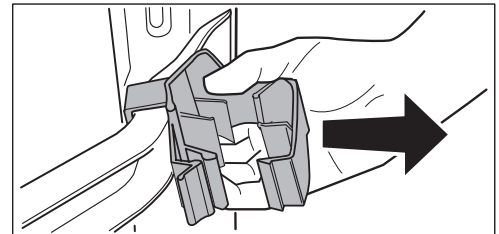


i Special spanner A and sealing caps B (2 off) and C (1 off) are supplied with the appliance.

3. Remove screw D with its compression spring using special spanner A.

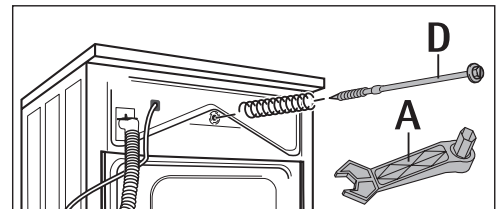


4. Turn sealing cap C upside down as shown in the illustration.

5. Seal hole using sealing cap C.

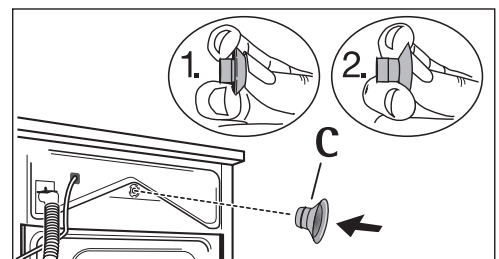

6. Unscrew and remove two screws E using special spanner A.
7. Unscrew and remove four screws F using special spanner A.
8. Remove transit bar G.
9. Screw in the four screws F again.
10. Seal the two big holes using sealing caps B.

Important! Press all sealing caps B (2 off) and C (1 off) in firmly, so that they snap into place. (Splash protection).

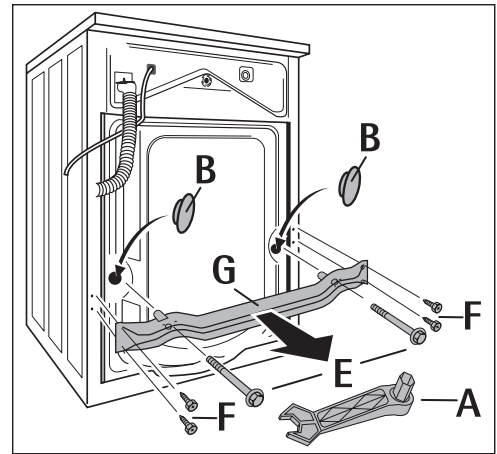


Where to install

Important! The appliance must not be used in a room where there is a danger of frost. Frost damage or impaired operation! Frost damage is not covered by the warranty.

- The surface on which the appliance is to be installed must be firm and level. Do not install the appliance on carpets or on soft floor coverings.
- The surface on which the appliance is to be installed must be clean and dry and free from coverings that move, so that the appliance does not slide.
- If the location in which the appliance is to be installed is fitted with small-format tiles, put a rubber mat (available in the shops) under the appliance.

If the appliance is to stand on a plinth:

In order for the appliance to be secure on the plinth, fixing plates*) must be mounted, into which the appliance is inserted.

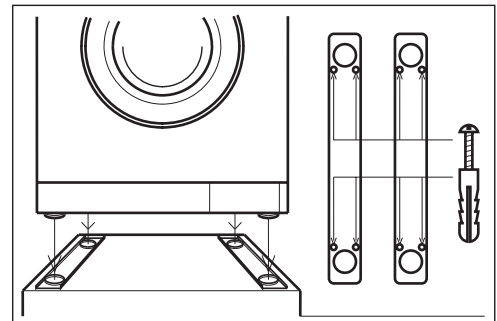

If the appliance is to stand on floors that vibrate, e. g. floors of wooden joists with deal boards:

If possible, install the appliance in one corner of the room.

1. Screw a water-resistant wooden board (at least 15 mm thick) onto at least 2 of the floor joists.
2. Affix fixing plates *) onto the wooden board, into which the appliance is inserted.


*) The fixing plates can be obtained from the Customer Care Department.

Making the appliance level

The four feet of the appliance are pre-adjusted. Large degrees of unevenness can be compensated for by individually adjusting the height adjustable screw feet.

Use the special spanner supplied to do this.

Important! Do not use pieces of wood, cardboard or such like to level out unevenness in the floor, but adjust the height adjustable screw feet instead.

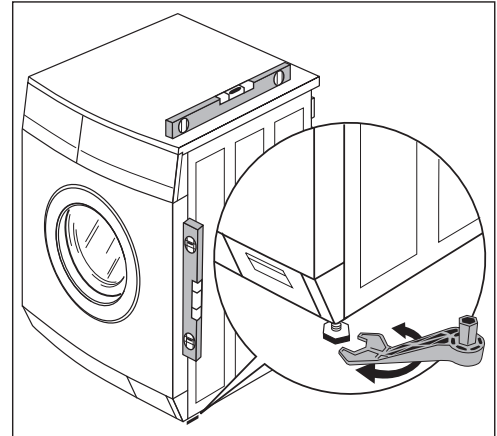

Electrical connection

Details about the voltage, type of supply and the fuses required are to be found on the rating plate. The rating plate is next to the doorway.

Connecting to the water supply

Important!

- This appliance **must not** be connected to the hot water system.
- When connecting it, use only new hose kits.
- Only connect the appliance to the drinking water supply. Rain water or water for industrial use may only be used if it fulfils the requirements of DIN1986 and DIN1988.
- Do not kink or crush the water inlet hose or drain hose.

Permitted water pressure

The water pressure must be at least 1 bar ($=10\text{N}/\text{cm}^2=0.1\text{MPa}$) and may be a maximum of 10 bar ($=100\text{N}/\text{cm}^2=1\text{MPa}$).

- If more than 10 bar: Connect a pressure reduction valve.
- If less than 1 bar: Disconnect the appliance end of the inlet hose from the solenoid inlet valve and remove the flow meter. (In addition remove the filter using pointed pliers and take out the rubber gasket behind it.) Re-insert the filter.

Water inflow


A 1.50 m long pressure hose is supplied with the appliance.

If a longer water inlet hose is required, only original hoses are to be used. The Customer Care Department stocks hose kits of different lengths.


i Sealing rings are either inserted in the plastic nuts of the threaded hose fitting or are included as spare parts. Do not use any other seals.

Important! All threaded hose fittings must only be tightened by hand.

1. Connect the hose with the right-angle connector to the machine.

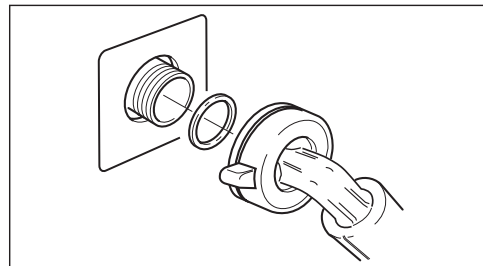


Important! Do not position the inlet hose vertically downwards. Position it to the right or the left as shown in the illustration.

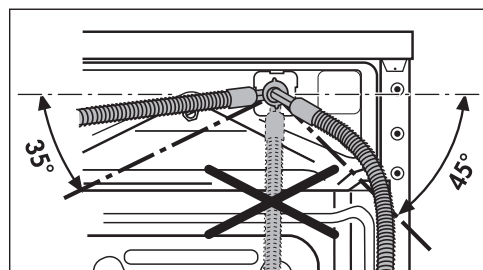

2. Connect the hose with the straight connector to a water tap with an R ¾ (inch) screw thread.

3. Open the water tap slowly and check all connections for water tightness.

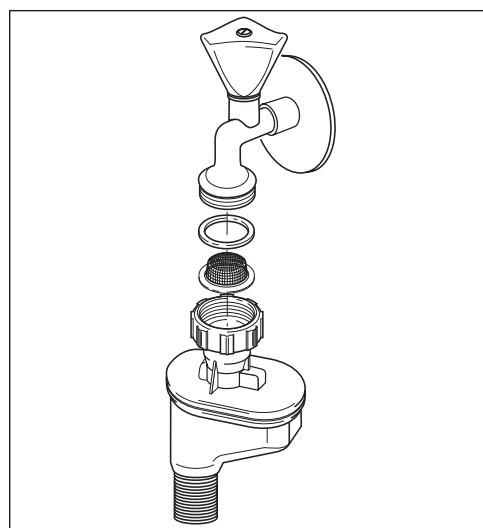


Water drainage

The maximum permitted difference between the height of the surface on which the appliance is installed and the water outlet is 1 metre.

Only original hoses may be used to extend hoses. (A maximum of 3 m laid on the floor and then 80 cm vertically). The Customer Care Department stocks outlet hoses of different lengths.

Draining water into a sink outlet

Secure the outlet/sink outlet joint with a hose band clip (available from your dealer).


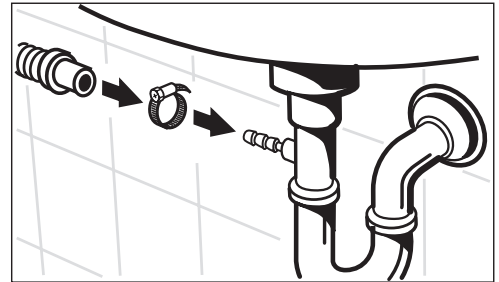


Draining water into a wash basin/bath



Important!

- Small basins are not suitable. Water may overflow.
- The end of the drain hose must not be in the water that has been pumped out. Otherwise water could be sucked back into the appliance.
- When draining into a wash basin or a bath, secure the drain hose with the supplied elbow to stop it slipping. Otherwise the water running out can force the hose out of the basin.
- When pumping the water out, check that the water is running away fast enough.

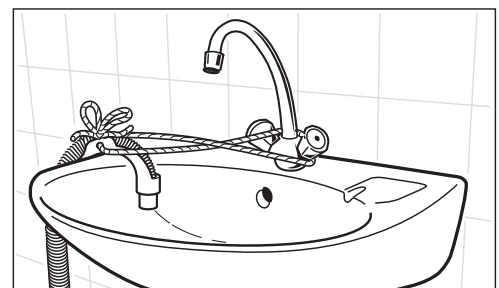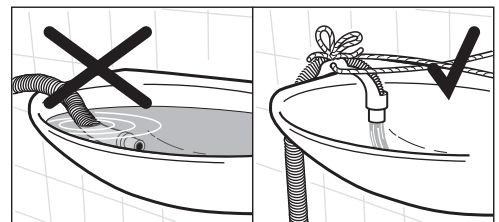

Pumping heights over 1 m

The washing machine's drain pump is able to pump water to a height of 1 meter, calculated from the surface on which the appliance is installed.

Warning! If pumping height is over 1 metre, malfunctions and damage to the appliance may arise.

For pumping heights over 1 metre a conversion kit can be obtained. Please contact the Customer Care Department.

Servicestellen

5506 Mägenwil/Zürich
Industriestr. 10

9000 St. Gallen
Vonwilstrasse 15

4127 Birsfelden
Hauptstrasse 52

8604 Volketswil
Hölzliwisenstrasse 12

6032 Emmen
Buholzstrasse 1

7000 Chur
Comercialstrasse 19

3063 Ittigen/Bern
Ey 5

Ersatzteilverkauf

5506 Mägenwil
Industriestrasse 10
0848 848 023

Fachberatung / Verkauf

8048 Zürich
Badenerstrasse 587
01 405 81 11

Garantie

Für jedes Produkt gewähren wir ab Verkauf bzw. Lieferdatum an den Endverbraucher eine Garantie von 2 Jahren. (Ausweis durch Garantieschein, Faktura oder Verkaufsbeleg).

Die Garantieleistung umfasst die Kosten für Material, Arbeits- und Reisezeit.

Die Garantieleistung entfällt bei Nichtbeachtung der Gebrauchsanweisung und Betriebsvorschriften, unsachgerechter Installation, sowie bei Beschädigung durch äussere Einflüsse, höhere Gewalt, Eingriffe Dritter und Verwendung von Nicht-Original Teilen.

Points de Service

1028 Préverenges
Le Trési 6

Points de vente de rechange

5506 Mägenwil
Industriestrasse 10
0848 848 023

Demonstration / Vente

8048 Zürich
Badenerstrasse 587
01 405 81 11

Garantie

Nous octroyons sur chaque produit 2 ans de garantie à partir de la date de livraison ou de la mise en service au consommateur (documenté au moyen d'une facture, d'un bon de garantie ou d'un justificatif d'achat).

Notre garantie couvre les frais de mains d'œuvres et de déplacement, ainsi que les pièces de rechange.

Les conditions de garantie ne sont pas valables en cas d'intervention d'un tiers non autorisé, de l'emploi de pièces de rechange non originales, d'erreurs de maniement ou d'installation dues à l'inobservation du mode d'emploi, et pour des dommages causés par des influences extérieures ou de force majeure.



Servizio dopo vendita

6916 Grancia
Zona Industriale E

Vendita pezzi di ricambio

5506 Mägenwil
Industriestrasse 10
0848 848 023

Consulente (cucina) / Vendita

8048 Zürich
Badenerstrasse 587
01 405 81 11

Garanzia

Per ogni prodotto concediamo una garanzia di 2 anni a partire dalla data di consegna o dalla sua messa in funzione (fa stato la data della fattura, del certificato di garanzia o dello scontrino d'acquisto).

Nella garanzia sono comprese le spese di manodopera, di viaggio e del materiale.

Dalla copertura sono esclusi il logoramento ed i danni causati da agenti esterni, intervento di terzi, utilizzo di ricambi non originali o dalla inosservanza delle prescrizioni d'installazione ed istruzioni per l'uso.

Ersatzteile, Zubehör und Pflegemittel

Schweiz: Sie können Ersatzteile, Zubehör und Pflegemittel on-line bestellen bei <http://www.electrolux.ch>

Pièces détachées, accessoires et produits d'entretien

Pour la Suisse : Vous pouvez commander des pièces détachées, des accessoires et des produits d'entretien en ligne sur <http://www.electrolux.ch>

Ricambi, accessori e prodotti di pulizia

Per la Svizzera: Ricambi, accessori e prodotti di pulizia si possono ordinare direttamente sul sito internet <http://www.electrolux.ch>

Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section “What to do if...”).

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

